


How to use

The VOX™ Reader is permanently attached to the inside of every VOX™ Book.

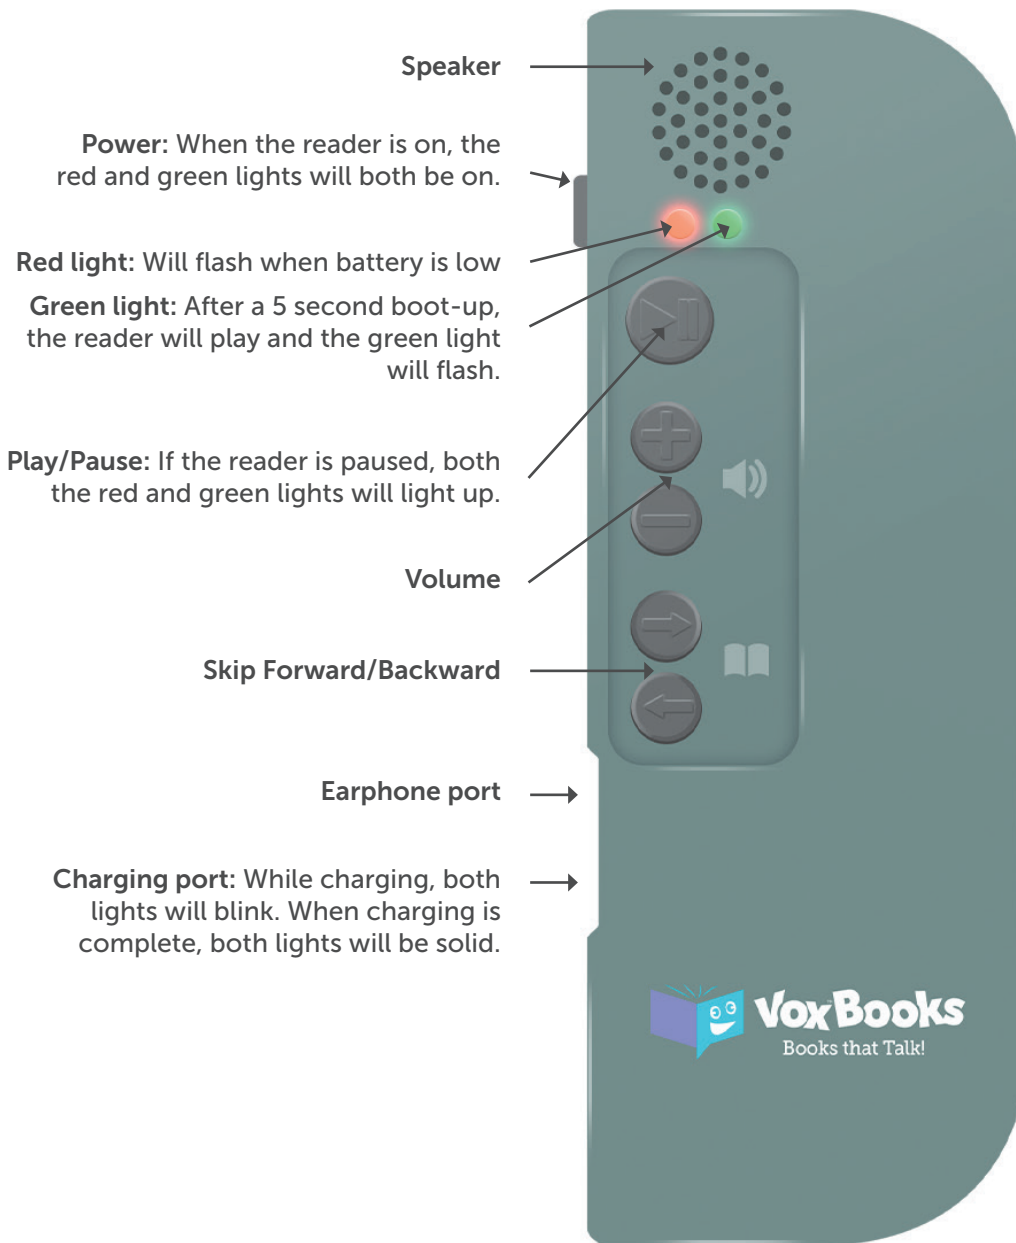

User Controls

Adjust the volume using the + and - buttons. Move forward or back a page with the ← and → buttons.

Listening Options


Use the built-in speaker above the control panel or attach earphones using the jack along the left side.

Easy Charging

To recharge, simply insert the included wall charger into the earphone/charging jack and connect to a wall outlet.

Guía de uso

El Lector VOX™ está permanentemente incorporado en todos los Libros VOX™.

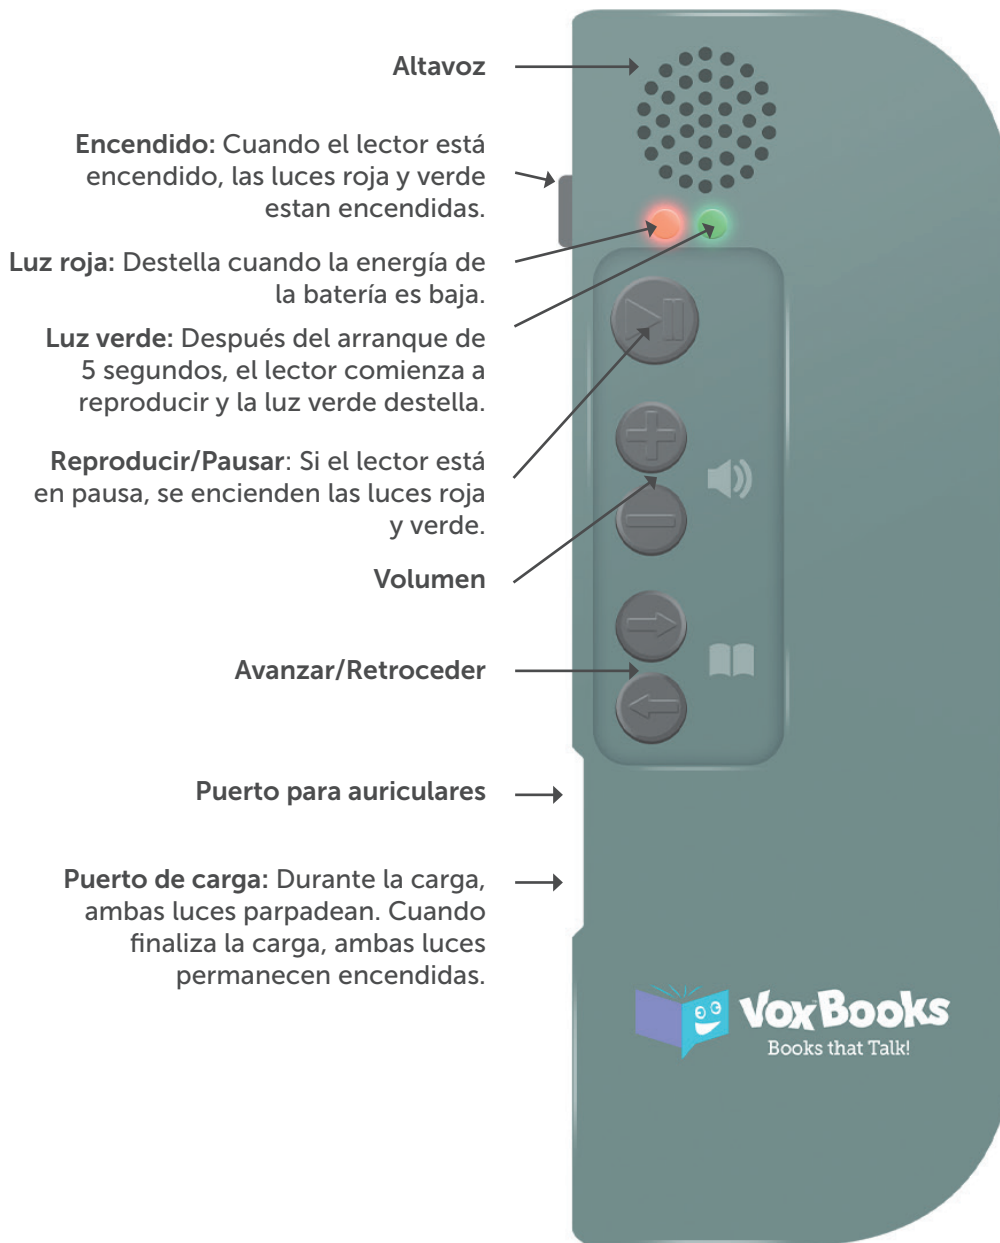

Controles

Ajuste el volumen con los botones + y -. Avance o retroceda una página con los botones ← y →.

Opciones para escuchar

Utilice el altavoz incorporado sobre el panel de control o conecte auriculares en la toma del lado izquierdo.

Carga sencilla

Para recargar, simplemente inserte el cargador de pared incluido en la toma de auriculares/carga y conéctelo al tomacorriente.